
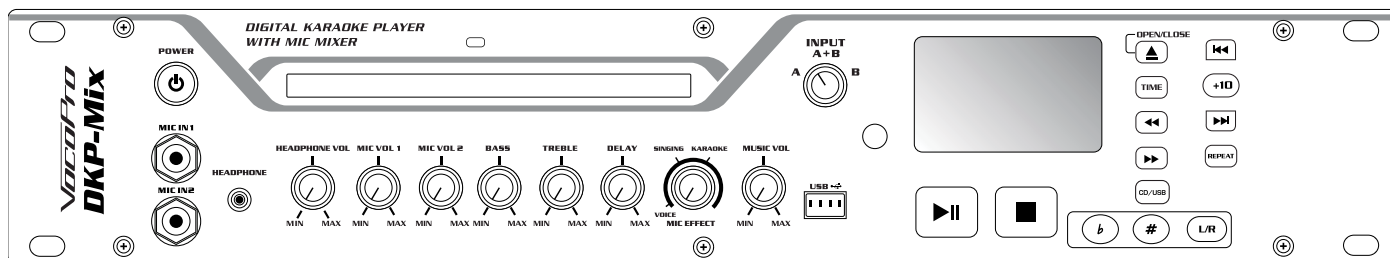


VocoPro[®]

PROFESSIONAL VOCAL SYSTEMS[™]

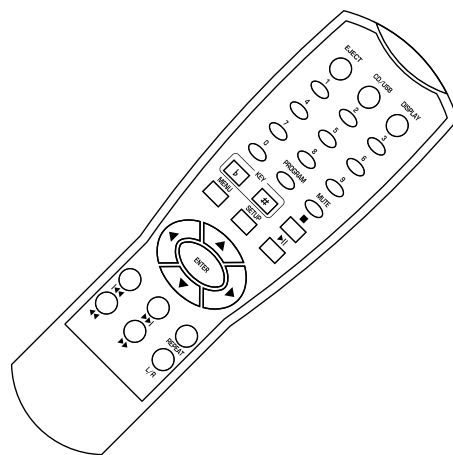

DKP-Mix

o w n e r ' s m a n u a l

Table of Contents

FCC Information	4
Listening for a Lifetime.....	5
Safety Instructions.....	6
Welcome	7
Getting Started	8
Getting Connected.....	9
Set Up Menu	16
Descriptions and Functions	19
Advance Remote Options.....	24
Troubleshooting	25
Specifications	27

FCC Information

1. IMPORTANT NOTICE: DO NOT MODIFY THIS

UNIT!: This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Vocopro may void your authority, granted by the FCC, to use this product.

2. IMPORTANT: When connecting this product to accessories and/or another product use only high quality shielded cables. Cable(s) supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the U.S.A.

3. NOTE: This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurances that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the owner's manual, may cause interference harmful to the operation of other electronic devices. Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "Off" and "On", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Use power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter(s).

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300-ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact your local retailer authorized to distribute Vocopro products. If you can not locate the appropriate retailer, please contact Vocopro, 1728 Curtiss Court, La Verne, CA 91750.

CAUTION

The apparatus is not disconnected from the AC power source so long as it is connected to the wall outlet, even if the apparatus itself is turned off. To fully ensure that the apparatus is indeed fully void of residual power, leave unit disconnected from the AC outlet for at least fifteen seconds.

CALIFORNIA PROP 65 WARNING

WARNING: This product contains chemicals known to the state of California to cause cancer and birth defects or other reproductive harm. (California law requires this warning to be given to customers in the State of California.)

For more information: www.vocopro.com/prop65

CAUTION:

READ THIS BEFORE OPERATING YOUR UNIT


1. To ensure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
2. Install your unit in a cool, dry, clean place - away from windows, heat sources, and too much vibration, dust, moisture or cold. Avoid sources of hum (transformers, v motors). To prevent fire or electrical shock, do not expose to rain and water.
3. Do not operate the unit upside-down.
4. Never open the cabinet. If a foreign object drops into the set, contact your dealer.
5. Place the unit in a location with adequate air circulation. Do not interfere with its proper ventilation; this will cause the internal temperature to rise and may result in a failure.
6. Do not use force on switches, knobs or cords. When moving the unit, first turn the unit off. Then gently disconnect the power plug and the cords connecting to other equipment. Never pull the cord itself.
7. Do not attempt to clean the unit with chemical solvents: this might damage the finish. Use a clean, dry cloth.
8. Be sure to read the "Troubleshooting" section on common operating errors before concluding that your unit is faulty.
9. This unit consumes a fair amount of power even when the power switch is turned off. We recommend that you unplug the power cord from the wall outlet if the unit is not going to be used for a long time. This will save electricity and help prevent fire hazards. To disconnect the cord, pull it out by grasping the plug. Never pull the cord itself.
10. To prevent lightning damage, pull out the power cord and remove the antenna cable during an electrical storm.
11. The general digital signals may interfere with other equipment such as tuners or receivers. Move the system farther away from such equipment if interference is observed.

NOTE:

Please check the copyright laws in your country before recording from records, compact discs, radio, etc. Recording of copyrighted material may infringe copyright laws.

Voltage Selector (General Model Only)

Be sure to position the voltage selector to match the voltage of your local power lines before installing the unit.

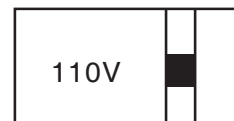

Safety Instructions



CAUTION RISK OF SHOCK



CAUTION: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Only refer servicing to qualified service personnel.

Explanation of Graphical Symbols



The lightning flash & arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of danger.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and servicing instructions.

WARNING

To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

- 1. Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
- 2. Retain Instructions** - The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
- 4. Follow Instructions** - All operating and use instructions should be followed.
- 5. Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 6. Water and Moisture** - Do not use this unit near water. For example, near a bathtub or in a wet basement and the like.
- 7. Carts and Stands** - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 7 A.** An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause an overturn.



- 8. Ventilation** - The appliance should be situated so its location does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation slots.
- 9. Heat** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- 10. Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- 11. Grounding or Polarization** - Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.
- 12. Power-Cord Protection** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
- 13. Cleaning** - Unplug this unit from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 14. Power lines** - An outdoor antenna should be located away from power lines.
- 15. Nonuse Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
- 16. Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- 17. Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or plug has been damaged; or
 - B. Objects have fallen into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
- 18. Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

Note:

To CATV system installer's (U.S.A.): This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected as close to the point of cable entry as practical.



Welcome

And thank you for purchasing the **DKP-Mix** from VocoPro, your ultimate choice in Karaoke entertainment! With years of experience in the music entertainment business, VocoPro is a leading manufacturer of Karaoke equipment, and has been providing patrons of bars, churches, schools, clubs and individual consumers the opportunity to sound like a star with full-scale club models, in-home systems and mobile units. All our products offer solid performance and sound reliability, and to reinforce our commitment to customer satisfaction, we have customer service and technical support professionals ready to assist you with your needs. We have provided some contact information for you below.

VocoPro

1728 Curtiss Court
La Verne, CA 91750

Toll Free: 800-678-5348

TEL: 909-593-8893

FAX: 909-593-8890

VocoPro Company Email Directory

Customer Service & General Information

info@vocopro.com

Tech Support

techsupport@vocopro.com

Remember Our Website

Be sure to visit the VocoPro website **www.vocopro.com** for the latest information on new products, packages and promos. And while you're there don't forget to check out our Club VocoPro for Karaoke news and events, chat rooms, club directories and even a KJ Service directory!

We look forward to hearing you sound like a PRO, with VocoPro, the singer's ultimate choice.

FOR YOUR RECORDS

Please record the model number and serial number below, for easy reference, in case of loss or theft. These numbers are located on the rear panel of the unit. Space is also provided for other relevant information

Model Number

Serial Number

Date of Purchase

Place of Purchase

Listening for a Lifetime

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. VocoPro and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to a higher volume of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.
- Pay attention to the different levels in various recordings.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

Some common decibel ranges:

Level	Example
30	Quiet library, Soft whispers
40	Living room, Refrigerator, Bedroom away from traffic
50	Light traffic, Normal Conversation
60	Air Conditioner at 20 ft., Sewing machine
70	Vacuum cleaner, Hair dryer, Noisy Restaurant
80	Average city traffic, Garbage disposals, Alarm clock at 2 ft.

The following noises can be dangerous under constant exposure:



Level	Example
90	Subway, Motorcycle, Truck traffic, Lawn Mower
100	Garbage truck, Chainsaw, Pneumatics drill
120	Rock band concert in front of speakers
140	Gunshot blast, Jet plane
180	Rocket launching pad

-Information courtesy of the Deafness Research Foundation

Getting Started



What's in the box?

- DKP-Mix Receiver
- Remote
- Power Adapter

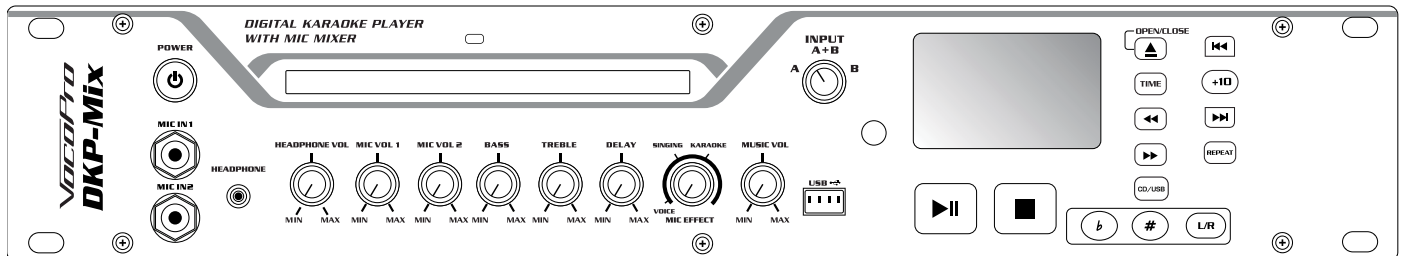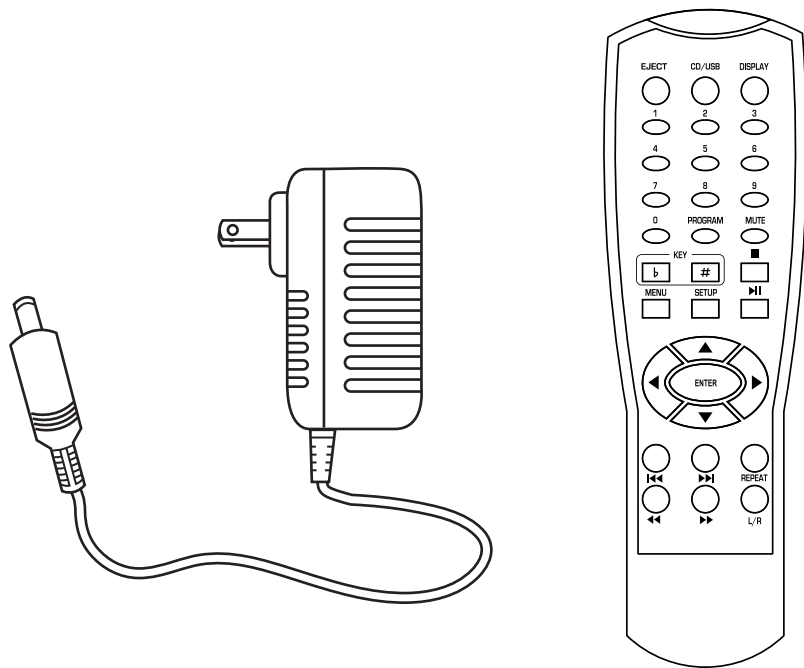


Getting Connected

- Connecting to auxiliary inputs on rear panel of DKP-Mix : Use an auxiliary cable to connect audio source output (i.e. MP3 player, SMARTPHONE, TABLET or Laptop headphone jack) to Auxiliary input on DKP-Mix. *in order to hear the audio source, make sure the input dial knob (on front panel of DKP-Mix) is turned to correct input channel setting.

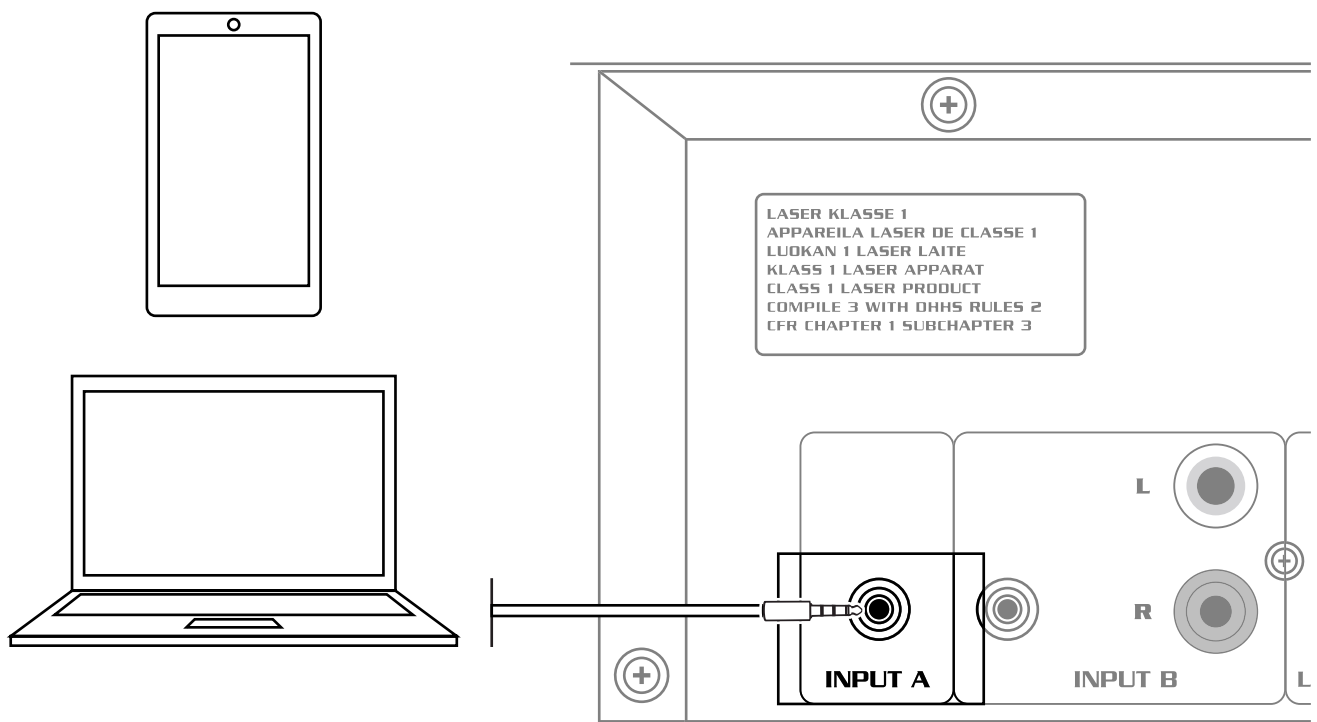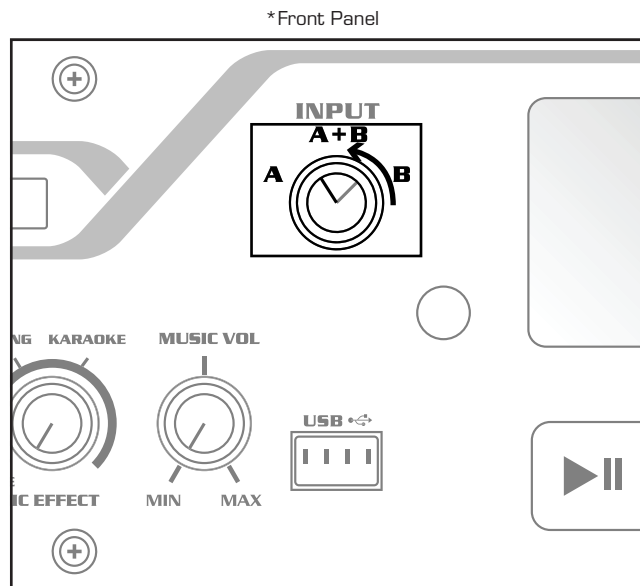

Getting Connected

- Connecting to RCA line inputs on rear panel of DKP-Mix: Connect an external audio source here via RCA cable (ex. DVD player, media streaming device)*in order to hear the audio source, make sure the input dial knob (on front panel of DKP-Mix) is turned to correct input channel setting.

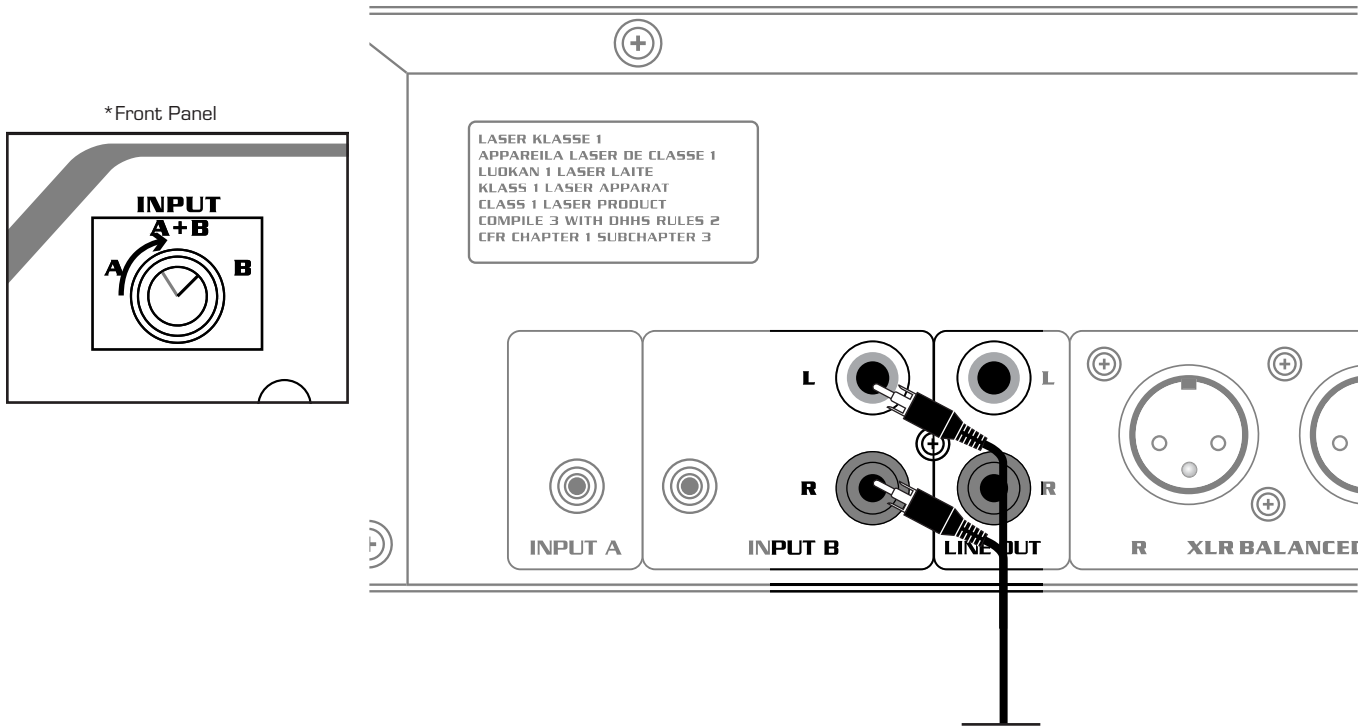


- Connecting to RCA Video Output: Connect the yellow connector of a common RCA (red,white,yellow) composite cable to the Video output jack on the rear panel of the DKP-Mix and connect the same connector on the other end of the cable to a “video input” jack of a television monitor.



Getting Connected

- Connecting to XLR (Balanced) audio outputs: Connect a pair of balanced XLR cables from the XLR Outputs on the back of the DKP-Mix to a pair of available XLR inputs on a mixer or speaker system.

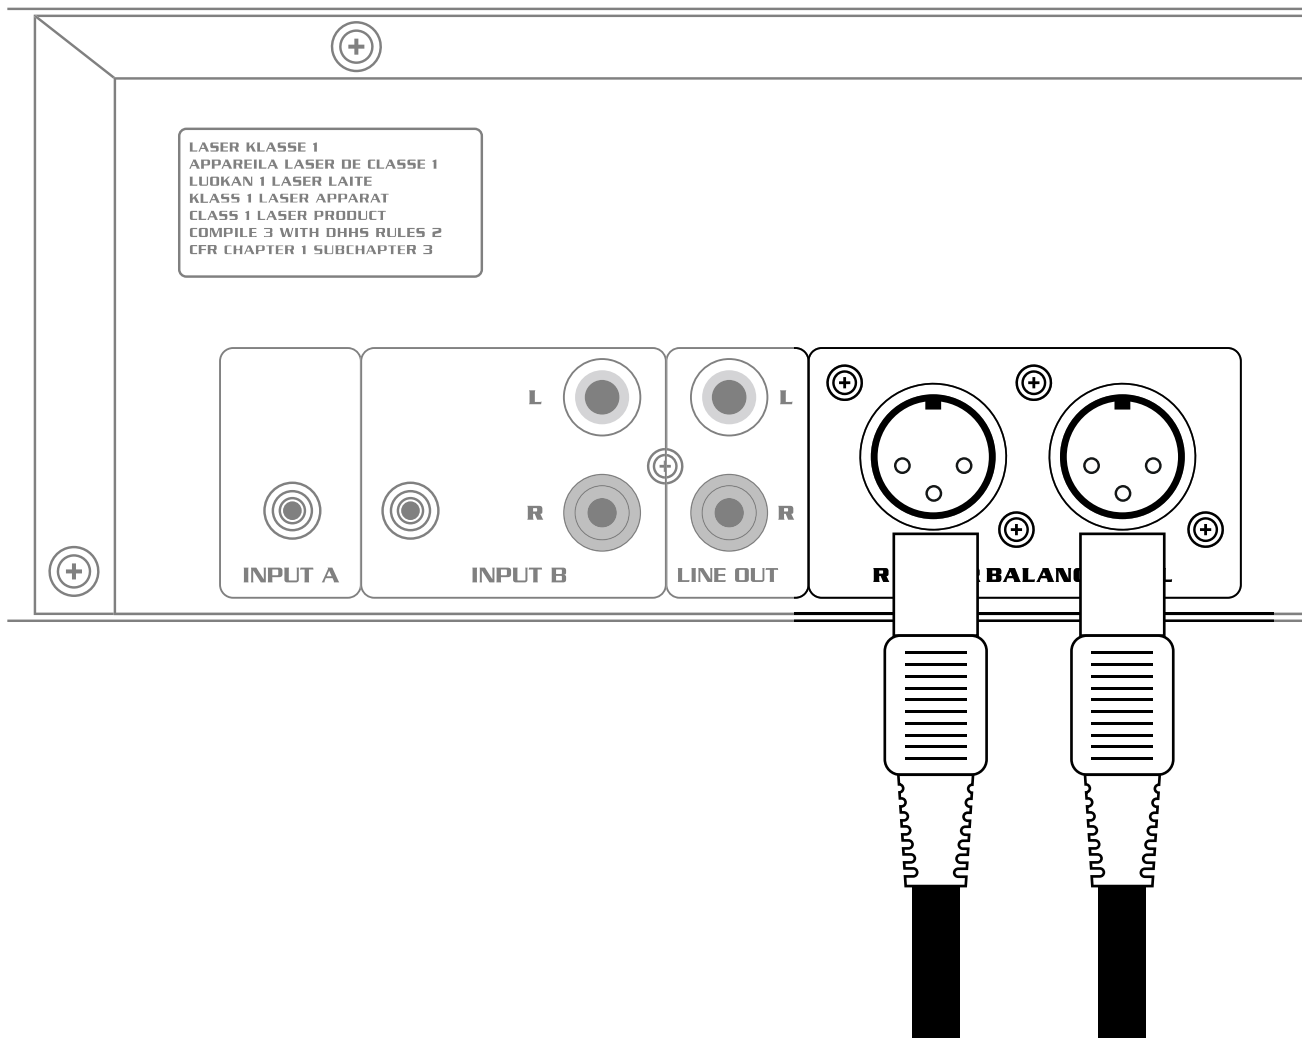



Getting Connected

Opening and Closing the Disc Tray

- Turn the unit power on. Press the OPEN/CLOSE button to open the disc tray. The disc tray can not be opened during playback.

Loading discs


- Hold the disc by the edges and place it in the disc tray, then press the OPEN/CLOSE button again to close the disc tray. **CAUTION:** Do not place any foreign objects in the disc tray, and do not place more than one disc in the disc tray at a time. Do not push the disc tray in manually when the power is off, as this may result in malfunction and damage to the player.

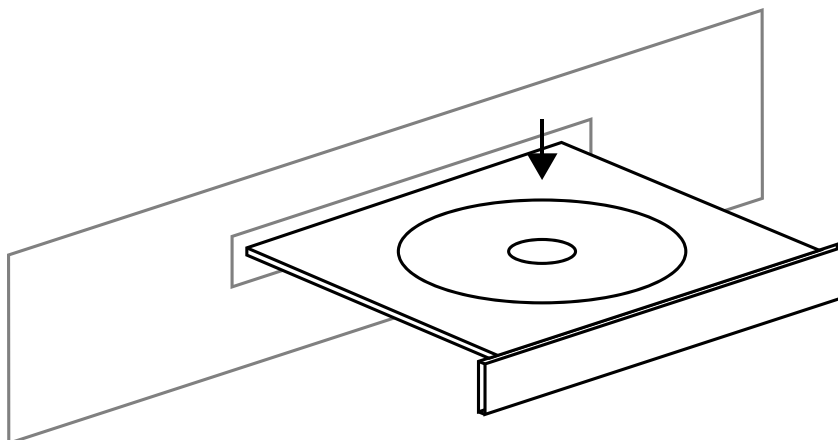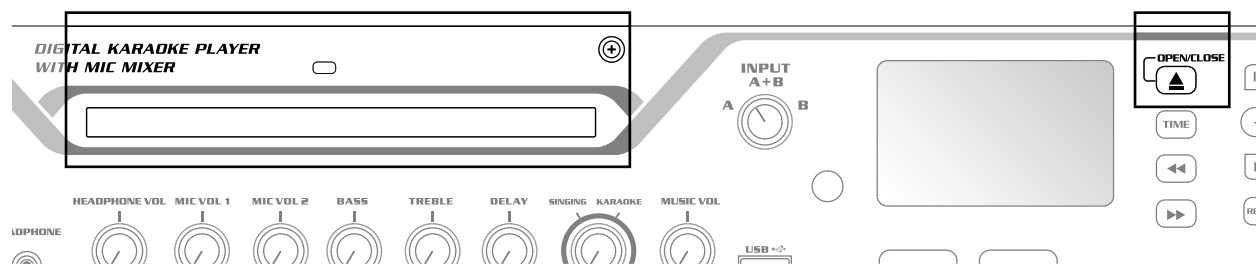

Getting Connected


Selecting Tracks

- Press the SKIP button (|<< >>|) once to move to next or Previous track.

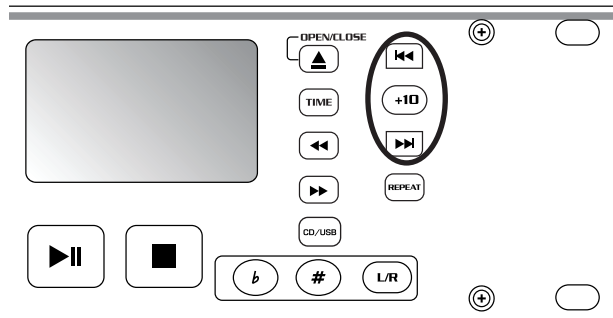

Disc Playback

- Once disc has loaded, seek through tracks and push play/pause button to begin playing selected track.

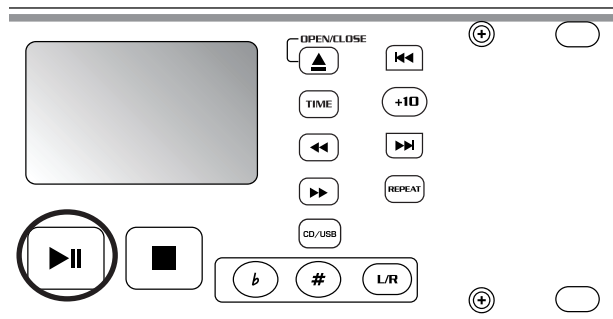


Fast-forward

- Press and hold the (>>) button to move forward through current media being played.


Rewind

- Press and hold the (<<) button to revert backward to a previous moment of the currently playing media (song,movie etc..)

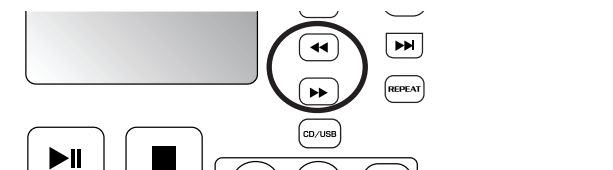


Pausing

- Press the PLAY/PAUSE button to switch between play and pause.

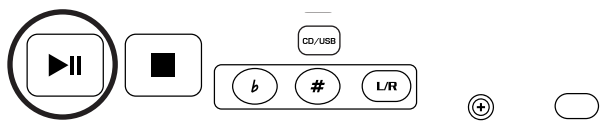

Stop

- Press once to immediately cease playback.

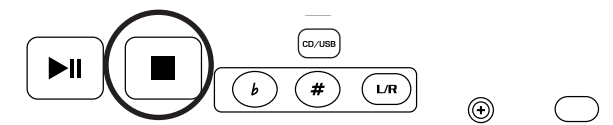

Getting Connected



INSERTING A USB DRIVE

1. Insert the USB drive into the USB slot.

*Please make sure that the DKP-Mix video output is sending to a display screen such as a television for viewing file navigation.

2. Use the CD/USB button to select USB.

3. At this point, all cd playback function buttons are enabled for use with the USB flash drive and its files.

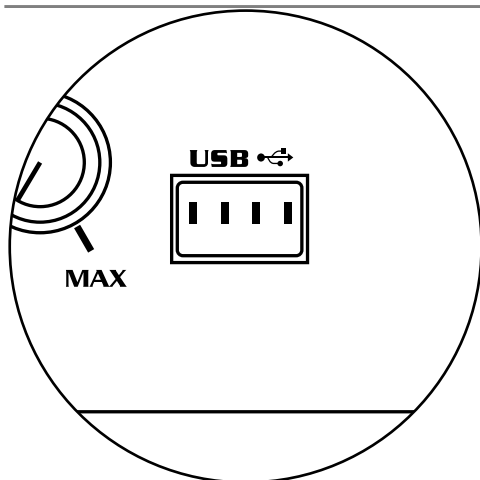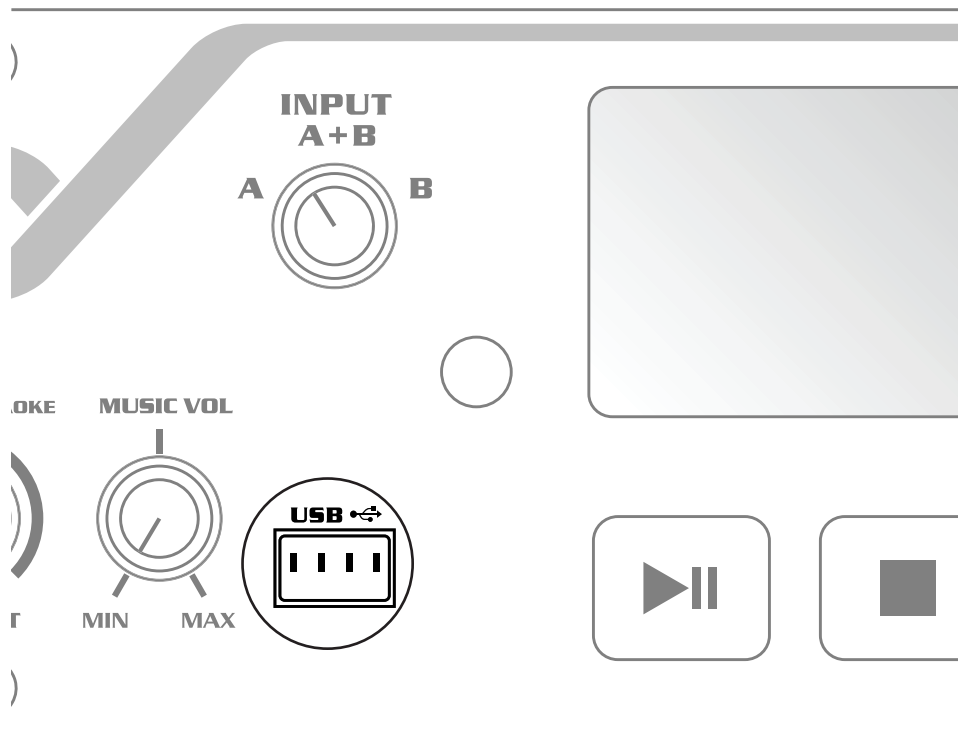

Getting Connected

*Please note: Display screen, on front panel of DKP-Mix, will only show track number and time elapsed. Any information in regards to song title and or artist will display on the connected video monitor.

- Selection options for type of media will be shown toward bottom of television screen (i.e. Music, Photos, Movies)
- When the Music playback media option is selected, all music files on the USB drive will be shown with folders on the left half of screen and the individual files, within those folders, on the right
- It is recommended to have all files stored in the root folder of the USB flash drive (no folders within folder) for easy access.
- Use Arrow buttons/enter button on remote to navigate and select desired files
- Program button on remote may be used to automatically play songs in a select sequence. Press Program button on remote and when numbered list appears, enter track numbers in desired order then highlight "play" on the display screen and press the enter button on your remote. Highlighting the clear option and pressing enter on the remote will remove all tracks from the program list.


Set Up Menu

- TV System: NTSC/ PAL (Highlight the video regional setting that corresponds with your area and press enter) *NTSC is default for USA
- Auto Play: Turn this setting on if you wish to have the unit skip any main menus of DVD discs and automatically play.
- Screen Saver: When set to ON, a graphic will replace an inactive display.
- Power Resume: This feature allows for returning to the exact same spot within a song, prior to the DKP-Mix being powered down.
- TV Type:
 - 4:3PS — “Full screen Pan & Scan” will cut a portion of the left and right of screen
 - 4:3LB — “Full screen Letterbox” will create a black border around the screen
 - 16:9 — widescreen

Password: After a password is set, this password will be required before attempting changes to rating settings

Ratings: Select content permissible for viewing (G,PG,PG-13,R, NC-17)

Default: Press enter to restore default factory settings.

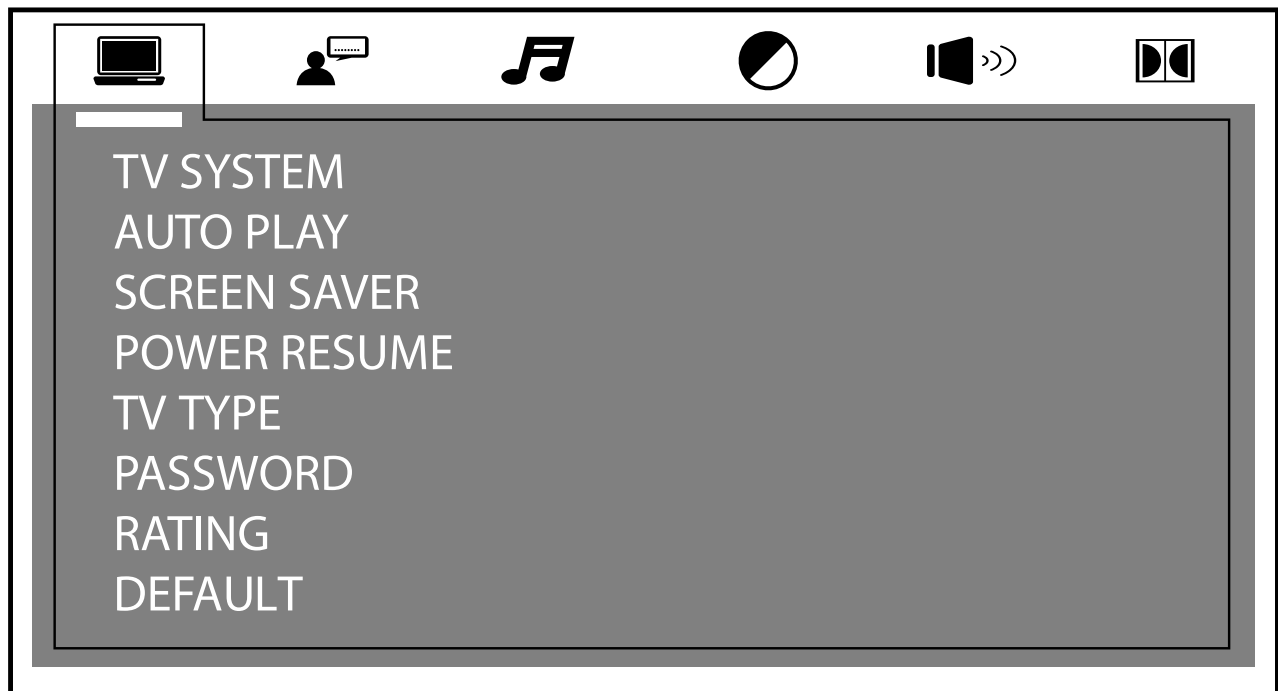

Set Up Menu

OSD (ON SCREEN DISPLAY) LANGUAGE

- Audio Language: selects the language in which audio will be presented (may require special disc that was previously recorded in multiple languages)
- Subtitle Language: selects the language setting provided by a disc with close captioning
- Menu Language: change the language of the DKP-Mix menus

Audio Out

SPDIF - Adjust these settings when connecting audio output into a digital receiver.

- SPDIF/OFF
- SPDIF/RAW - Use when sending audio to 5.1 surround sound receivers.
- SPDIF/PCM - Outputs 2 channel stereo

Picture Settings

- Brightness: Increase to make screen produce more light or decrease to dim
- Contrast: Increase to make colors more distinguishable
- Hue: Adjusts colors to their more natural appearance
- Saturation: Adds more grey to the colors present in overall picture
- Sharpness: Adjusts the perceived focus of picture

DOWNMIX

- LT/RT: This setting controls whether the main audio mix is being sent to the left or right channel output. Using this function with multi-plexed discs could potentially cancel out the vocal track that is recorded on the disc.
- Stereo: Use this setting when there are two or more independently recorded channels on the media (disc/usb file) and you intend to connect at least two loudspeakers.
- VSS: This setting provides a virtual surround sound of the mixed audio output.
- Subwoofer ON/OFF: This setting must be ON if connecting a subwoofer to the DKP-Mix.

OP MODE:

- LINE OUT: Analogue signal setting that has the highest output without need of amplification. Use this setting to have maximum dynamic range.
- RF REMOD: Apply this function to minimize dynamic range and have a more steady output volume (*preferred for quiet listening)
- Dynamic Range: Applying a full setting will allow the user to hear drastic contrasts between the loud and soft portions of the audio. When the dynamic range is lowered, there will be a more consistent volume overall.

Set Up Menu


DUAL MONO:

- STEREO: Cancels out mono output modes by sending independent audio signal to both left and right channel
- Mono L: Sends single audio signal to be perceived from the left channel
- Mono R: Sends single audio signal to be perceived from the right channel
- Mix mono: Takes a single audio signal and allows it to be applied to multiple speakers

Descriptions and Functions

FRONT PANEL — LEFT


1. Power — Use this button to turn the DKP-Mix ON/OFF.
2. Mic 1 Input — Connect a 1/4" unbalanced microphone here.
3. Mic 2 Input — Connect a 1/4" unbalanced microphone here.
4. Headphone Jack — connect a pair of headphones here to monitor all audio from the DKP-Mix
5. Headphone Volume — adjust this knob to increase or decrease the volume of the audio being sent to headphones.
6. Mic 1 Volume — This knob alters the Mic 1 input volume.
7. Mic 2 Volume — This knob alters the Mic 2 input volume.
8. Bass — This knob alters the low-frequency response of the input music signal.
9. Treble — This knob alters the mid-level frequency response of the input music signal.
10. Delay — This knob alters the length of pauses between Echo repeats.
11. Mic Effect — This knob alters the amount of effects applied to both microphone inputs.
12. Music Volume — This knob alters the volume of the input music source.
13. Input Select — This knob selects which input audio will be heard from the output jacks.
14. USB — Insert USB drive here.

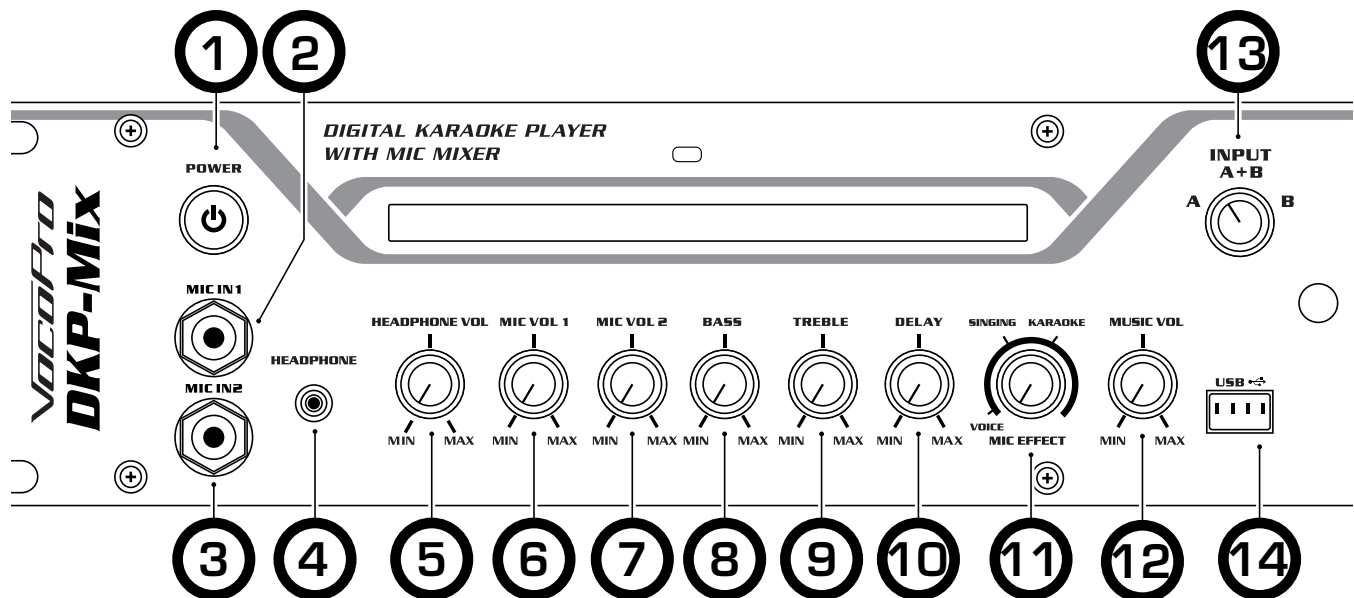

Descriptions and Functions

FRONT PANEL — RIGHT

1. OPEN/CLOSE — Press it to open and close the disc tray. The disc tray cannot be opened during playback, so stop playback before pressing the button
 2. LCD DISPLAY — Displays graphical information about playback settings and disc/song time.
 3. TIME — Switches between three settings: - Elapsed playing time. - Remaining time in the current song. — Current total playing time - Total remaining time of the disc.
 4. REPEAT — Use this button to replay disc content.
 5. PLAY/PAUSE — Use this button to start playback. Press once to start playback, once again to set the pause mode, and once more to resume playback.
 6. STOP — Press once to immediately cease playback (time elapsed will revert to show the total time of inserted disc) *if playing a cd, the play button will resume playback at the previous moment in time at which the disc was stopped. This short-term memory function is wiped clean (reset) once unit is powered off or disc is removed from tray.
 7. PGM — For creating a custom program list. (See pg. 24 for details)
 8. TRACK |<< and >>| — Use these buttons to skip to the next track (>>|) or jump back to a previous track (|<<). Press the 10+ button to skip ahead 10 tracks
 9. FAST FORWARD - Press and hold to scan forward through currently playing media.
REWIND - Press and hold to scan backwards through currently playing media.
 10. KEY CONTROL- # Button raises the key of music played from either CD or USB
b Button lowers the key of music played from either CD orUSB
- *Note: The Key, of the currently playing song, will only automatically reset (to originally recorded key) when the disc or usb flash drive is removed from the DKP-Mix.
11. L/R — Effectively cancels out vocals recorded on the center channel of multiplexed discs
 - 12 . CD/USB- Press to toggle between primary playback audio source.

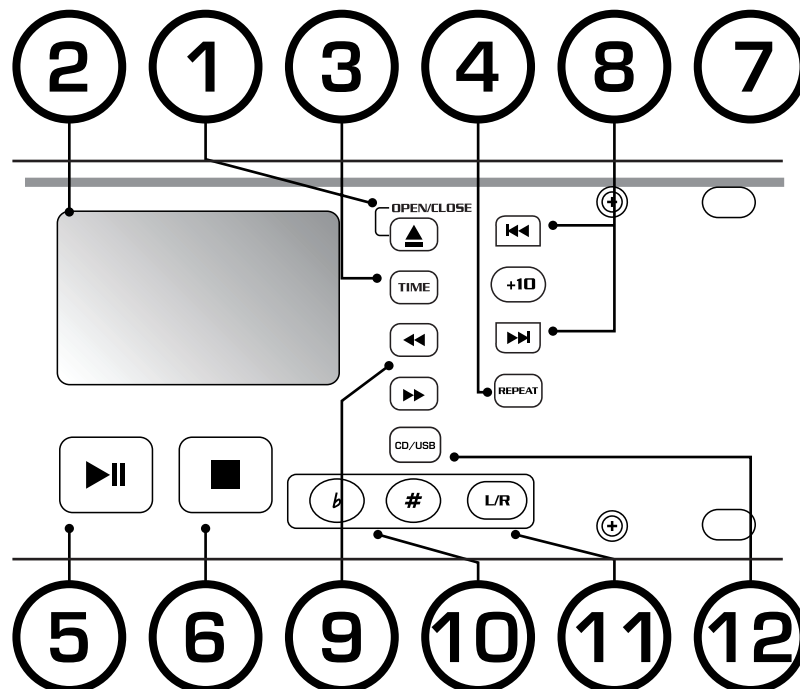


Descriptions and Functions

BACK PANEL

1. INPUT A- Auxiliary connector that allows audio input from external sources via auxiliary cable (ex. Mp3 player, Laptop)
2. INPUT B- Connect an external audio source here via auxiliary cable (ex. Mp3 player, Laptop) or RCA cable (ex. DVD player, media streaming device)
3. Unbalanced RCA Line out - Non-amplified audio output
4. XLR Output - Balanced stereo output

Note: Use the input selector knob, on the front panel, to change which audio input bank (Input A or Input B) you hear as the primary audio source. The Input A+B selection allows for a total of two auxiliary inputs and one RCA input to be heard simultaneously.

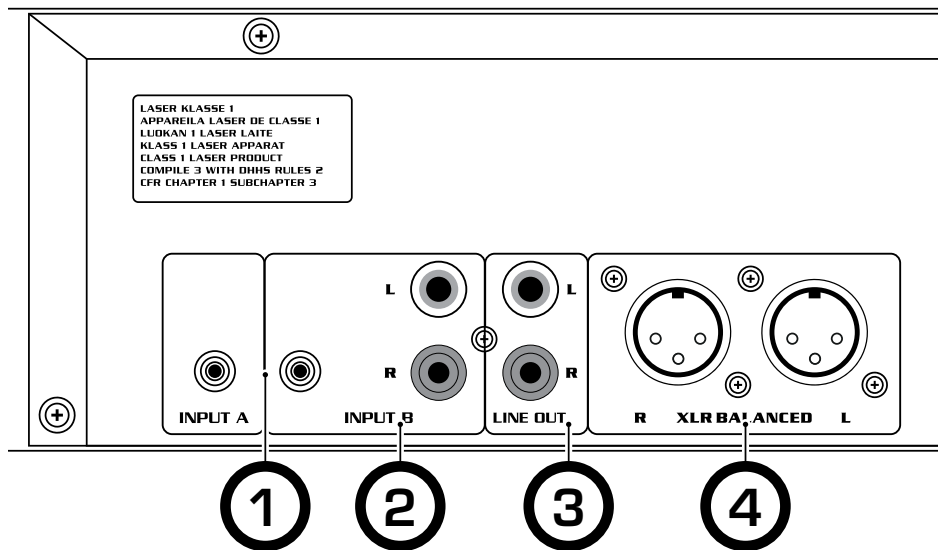

DKP-Mix
www.vocopro.com
VocoPro
LA VERNE CALIFORNIA
U. S. A



NTSC/PAL switch- adjusts the video regional setting for the disc reader
NTSC = USA
PAL= Europe


*If you have a video output signal that is distorted and or rolling, please check this switch setting.

Descriptions and Functions

REMOTE

1. Eject: Press this button, when inserting or removing a disc, to open or close the disc loading tray.
2. CD/USB: Press this button to toggle between CD player or USB reader as the main audio source.
3. Display: This function will provide current track information on your connected video monitor.
4. 1-9: Use these buttons to make specific track number selections
5. Program: You can program up to 16 tracks on a CD or chapters in a movie to play in a custom order. (Pg. 24)
6. Mute: Temporarily disables all audio output from the DKP-Mix
7. Key: B — \flat (flat key) lowers the key of cd/usb track one half-step increment
 - \natural (natural key) returns music to it's original key
 - \sharp (sharp key) raises the key of cd/usb track one half-step increment
8. Menu — Returns the user to the original menu
9. Setup — Prompts a menu with various advance functions (see set-up menu page)
10. (Play/Pause button) — use to temporarily cease cd/usb playback or press once more to resume
11. Arrows and Enter Buttons — These buttons allow the user to navigate through menus and apply different functions allotted by the DKP-Mix
12. (Previous button) — Press once to return to the beginning of the currently playing track or press twice in rapid Succession to navigate to the previous track/chapter.
13. (Next button) — Press to skip forward to next track/chapter
14. Repeat — enable to have the DKP-Mix replay the currently playing track, once finished.
15. (Rewind button) — Press and hold to revert to a previous moment in time, within the track/movie being played
16. (Fast forward button) — Press and hold to skip forward through the currently playing track/movie.
17. L/R — Toggles whether audio output is sent from the left, right or both channels.
*If using a multi-plex formatted disc, this button may be used to essentially cancel track vocals

Descriptions and Functions

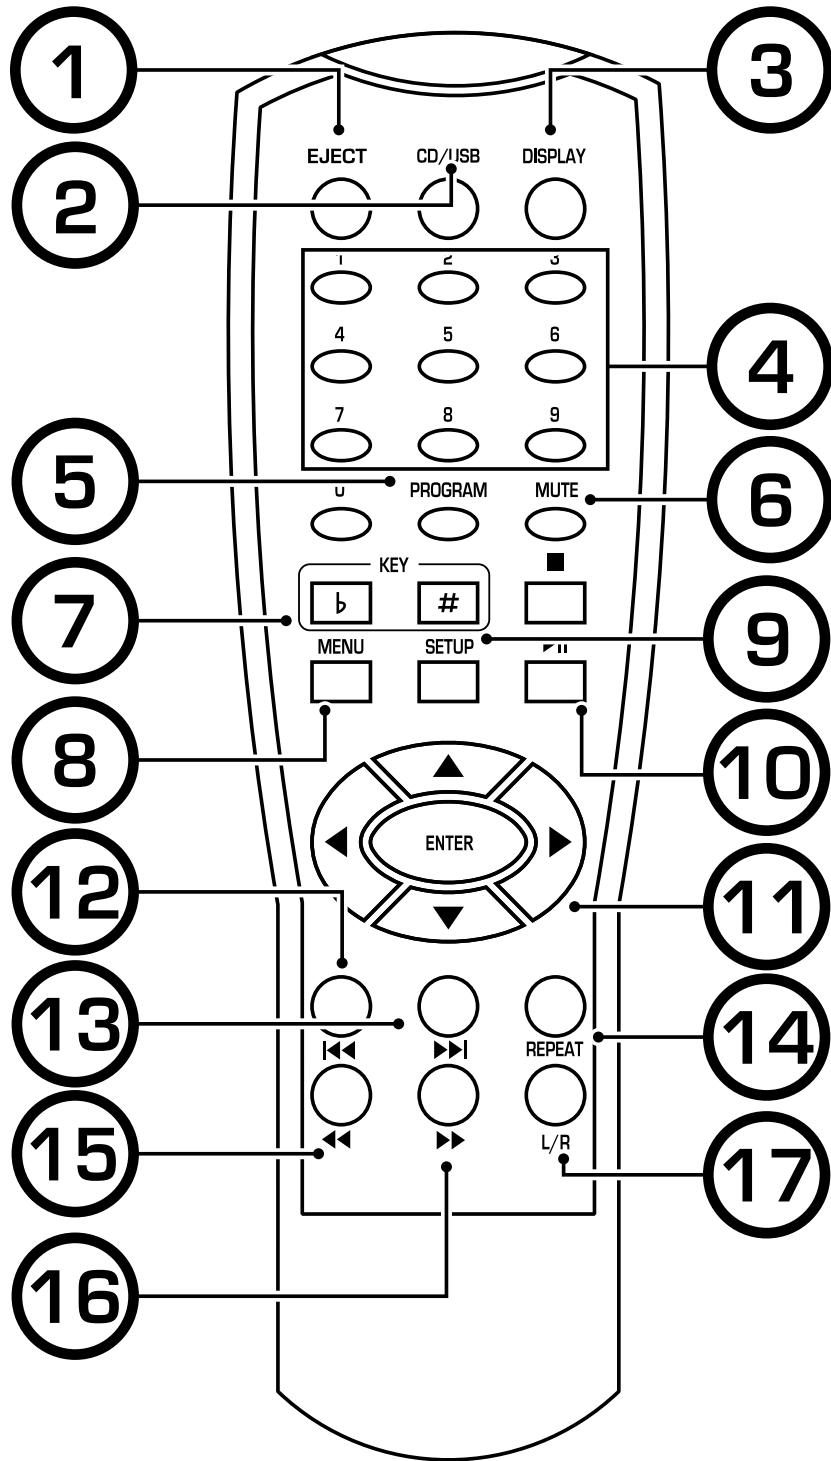

Advance Remote Options

PROGRAMMING TRACKS/CHAPTERS:

1. Press the PROGRAM button on the remote or PGM button (See pg. 10 #7) to access the program menu.
2. In each empty numbered slot, enter the track number that you want to play (the lowest numbered slot filled in will be the first to play)

Note: For tracks 1-9 simply press the individual number on the remote, you do not have to press 0 first.

3. Highlight the Play button within the menu and press enter
- To remove programmed tracks, highlight CLEAR and press enter

Note: The only tracks to now play will be the ones you have selected, in the order you have selected. Pressing the next button will cycle through the tracks you have set in the program list only.

1	----	5	----	9	----	13	----
2	----	6	----	10	----	14	----
3	----	7	----	11	----	15	----
4	----	8	----	12	----	16	----

PROGRAM

PLAY CLEAR

- * Pressing stop during program play will revert disc playback to sequential play (denoted on screen by SEQ PLAY) however, the program list does not clear. Simply enter program list and press play to use previously composed program list.
- * Ejecting the disc will revert disc playback to sequential play and also clear custom input from program list.

Troubleshooting

There is no power

- Make sure the power cord is firmly connected to the power outlet.
 - If using a power strip/surge-protector, make sure that it is plugged in and switched on.
- *Please be advised that it is safe practice to power the DKP-Mix on in the following fashion:
1. Always make sure the DKP-Mix power switch is in an off position
 2. Plug the power adapter into the "DC In" receptacle on the rear panel
 3. Plug DC power adapter into wall outlet or surge protector/power strip
 4. Press Power button on front of DKP-Mix.

There is no sound (audio output)

- Make sure everything is connected firmly and properly.
- Make sure there are no defective cables.
- The Disc player audio output is always present in all audio output jacks when the disc is playing. If you are using an external audio source then make sure the "input dial knob" is set to the correct input channel (A or B)
- Make sure all of your audio input sources (i.e. Mp3 player/laptop hardwired via auxiliary cable) to the DKP-Mix are powered on and sending an adequate audio signal.
- Make sure all of the components (amp, mixer, TV, etc.) are set to the proper inputs.

There is no sound (Headphones)

- Turn headphone volume knob clockwise to the right (see Descriptions and functions Front Panel #5)
- Check that the headphone cable wire is not faulty: A faulty wire is detected when audio seems to only be heard when the wire is turned and or twisted at a specific orientation.
- High impedance variety headphones may require the audio source (DKP-Mix) to be turned up a little more (check headphone specs to see that they do not require a separate headphone amplifier)

There is no sound (Microphone)

- Check that the microphone cable is firmly connected into the microphone and that the other end of the cable is firmly inserted completely into either of the microphone input jacks on the front of the DKP-Mix
- Increase microphone volume by turning corresponding MIC Vol Knob clockwise to the right (see Descriptions and functions Front Panel # 6 & 7)
- If your microphone requires phantom power, it may not be compatible to use with the DKP-Mix (see technical specifications)

Troubleshooting

The disc does not play or is skipping

- Make sure the disc is inserted correctly (label-side up).
- Make sure the disc is clean and not scratched.
- If using a CD-R/RW, try using a different brand as some brands might not be compatible.
- When creating a CD-R make sure not to solely write a data-disc and that the file format chosen is one compatible for the DKP-Mix's reading capability (see features pg)
- Clean the CD lens using a CD lens cleaner.
- If the disc is a CD+G, make sure the player is not bumped or shaken, as the anti-skip feature does not function with CD+Gs.
- Make sure that the DKP-Mix sits on a level surface with no upward or downward tilt

There is no Video

- Replace RCA cable with one that is not faulty
- Check video system switch setting (see Back Panel on Descriptions and Functions pg) *NTSC is the correct setting for USA
- If connecting to a television video input, make sure the television is set to the correct input channel (i.e. AV1, AV2, AUX)
- Make sure all cables are firmly attached at all input/output connectors
- Restart DKP-Mix

Specifications

- NTSC/PAL Switchable for Worldwide Compatibility
- Full-featured playback with single and repeat playback modes
- Rugged, Professional and Space Saving Design offering portability as well as sustainability
- Multi-format disc play that supports DVD, DivX, VCD, CD+G, Mp3, CD
- Dual ¼" microphone inputs with individual volume controls
- Built-in Echo effect for a more professional vocal sound
- Headphone jack input with individual volume control
- Fully-functional remote for ease of operation
- USB reader for playing digital files, ultimately allowing the user to increase song library capacity.
- ± 6 (1/2) step Digital Key Control for changing the key of the music to fit your vocal range via remote or front panel
- Individual RCA/XLR input/output jacks

Notes

