


SmartOke-Pro Quick Set-Up Guide

Thank you for purchasing the SmartOke-Pro karaoke package. Below we will go over the basic setup procedure to get these items working together with your music source. More info about each item can be found in its own User Manual.


Step 1. Turning on the SmartOke

Use the USB-C cable to plug the SmartOke box into power. Press the Power button to turn it on.

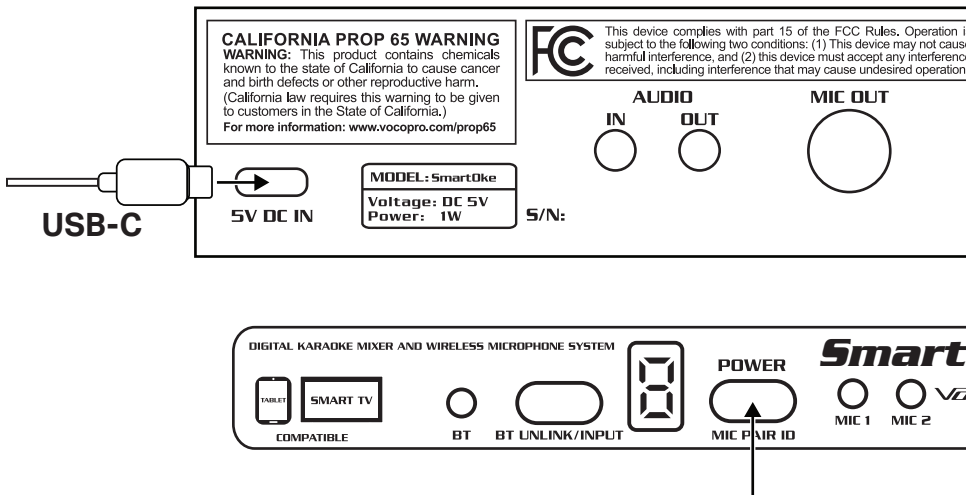


Step 1. Turning on the SmartOke (Continued)

Install 2x AA batteries in each of the wireless mics and power them on.

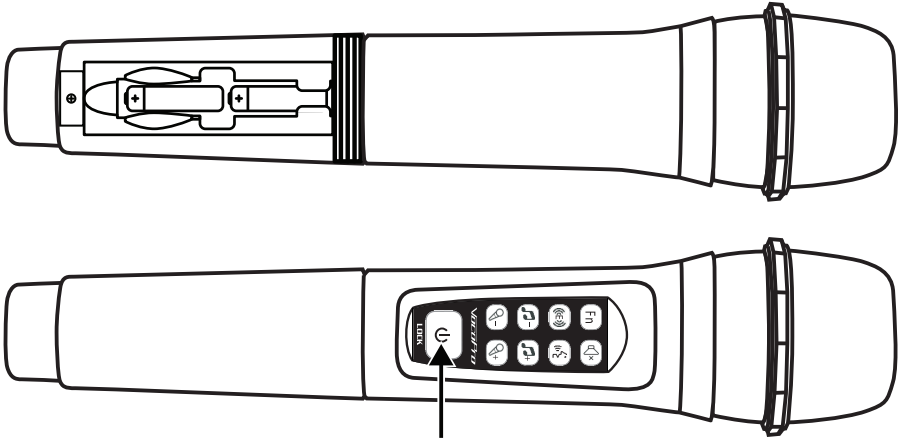

The Power button on the mics should be solid green to show they are connected, and the Mic 1 & Mic 2 status lights on the SmartOke box should also be solid green.

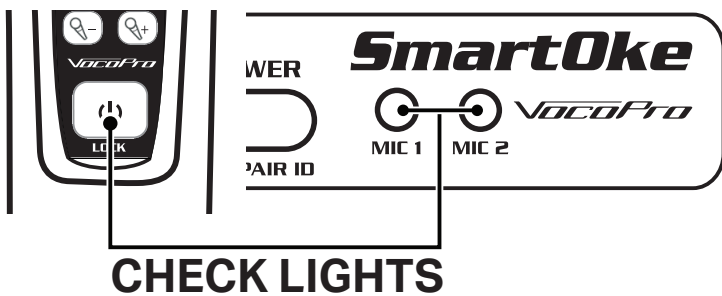


(If the mics do not pair immediately out of the box and the green lights are flashing, please see the SmartOke manual for how to re-sync them.)

Step 2. Getting Microphone Audio


Using the included 15 ft. 3.5mm (1/8") audio cable, connect one end to the AUDIO OUT on the back of the SmartOke, and connect the other end to the AUX input on the back of the PV-WEDGE-II speaker.

California law requires this warning to be given to consumers in the State of California.)
For more information: www.vocopro.com/prop65

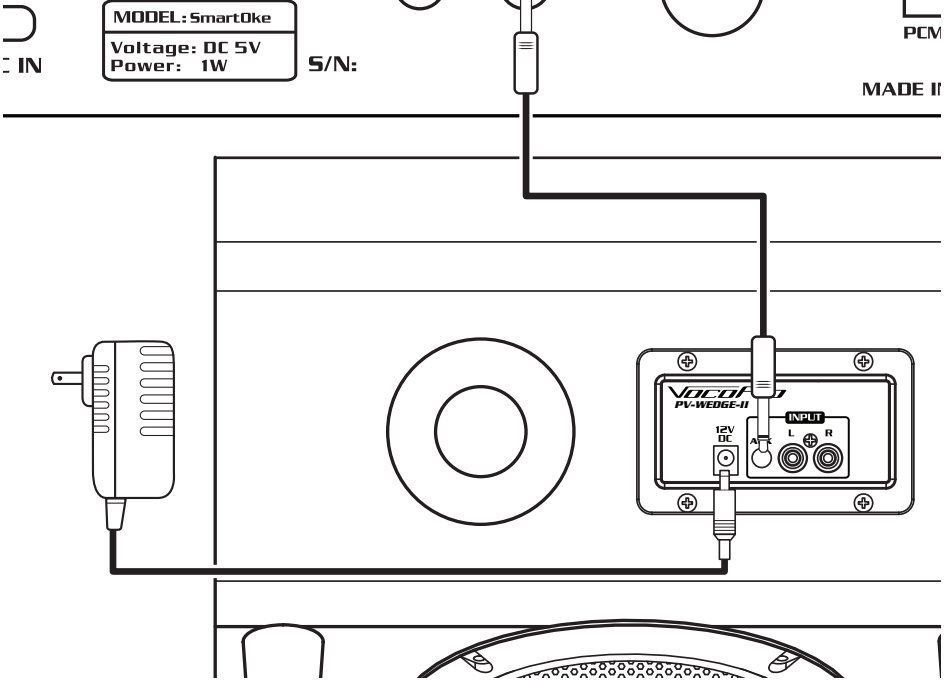

Connect the PV-WEDGE-II speaker to power using the 12V DC adapter.

Turn the speaker on, turn the volume knob up, and speak into the microphone. At this point you should be getting mic audio coming through the speaker.

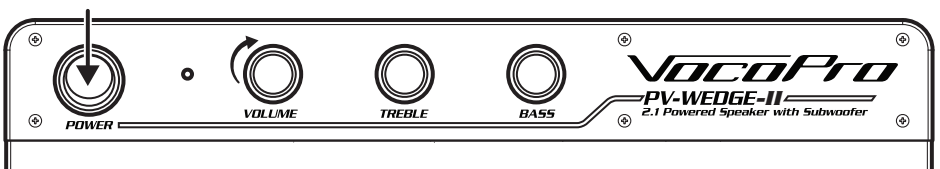


Step 3. Connecting a Music Source


There are three ways to connect to SmartOke for music:

Option 1: Connecting to a Smart TV

Press the BT UNLINK/INPUT button on the SmartOke until the display reads 'O' for Optical.

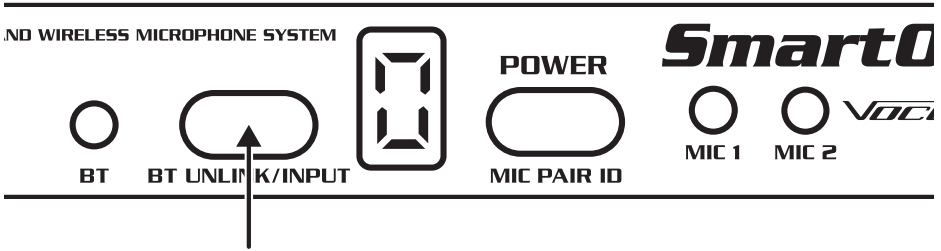


Using the optical cable, connect one end to the DIGITAL OPTICAL AUDIO OUT on your smart TV and connect the other end to the OPTICAL IN on the SmartOke.

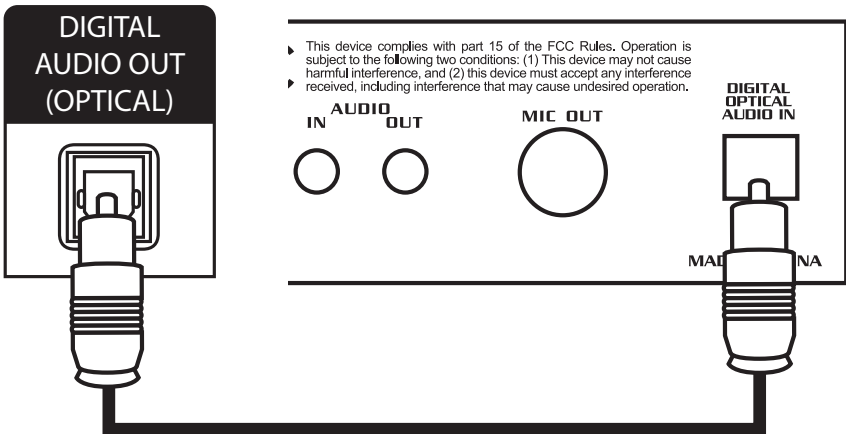

(You may need to go into your TV's sound settings and change the output to Optical and more specifically to PCM Optical if you have the option. Not all TVs have the same options and some will change automatically.)


Option 2: Connecting a Bluetooth Device

Press the BT UNLINK/INPUT button on the SmartOke until the display reads 'b' for Bluetooth.

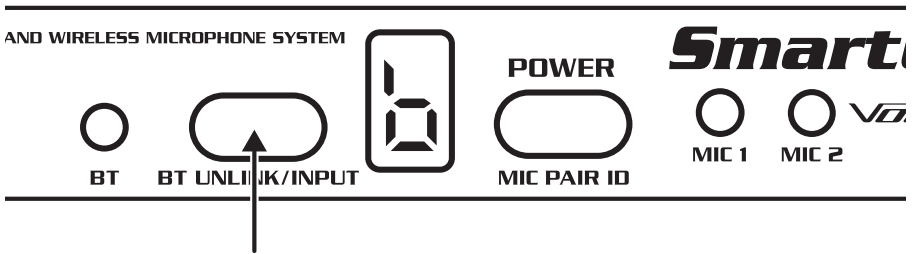


Open Bluetooth settings on your device and connect to the "SmartOke".

(If you don't see it right away, try turning Bluetooth off and back on, on your device, and/or cycling through the inputs on the SmartOke.)

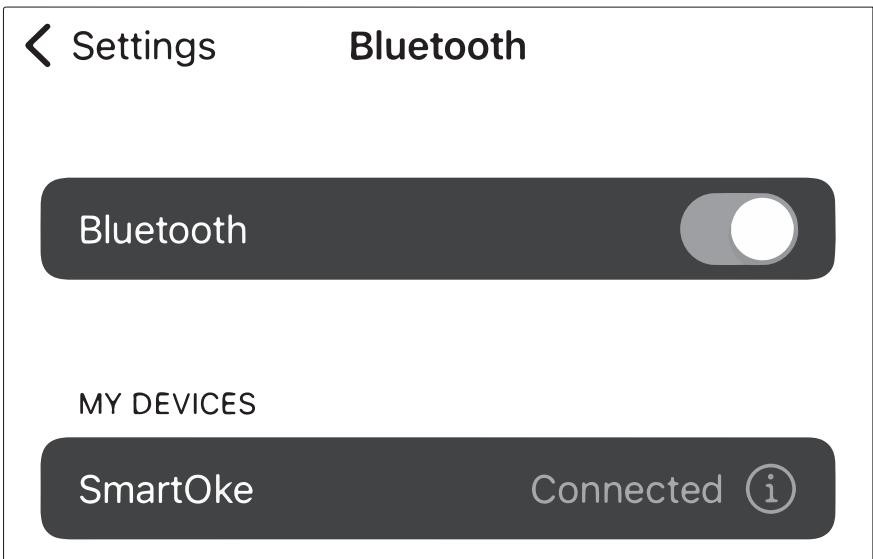


Option 3. Connecting from a Stereo Source, e.g. DVD player

Press the BT UNLINK/INPUT button on the SmartOke until the display reads 'A' for Audio.

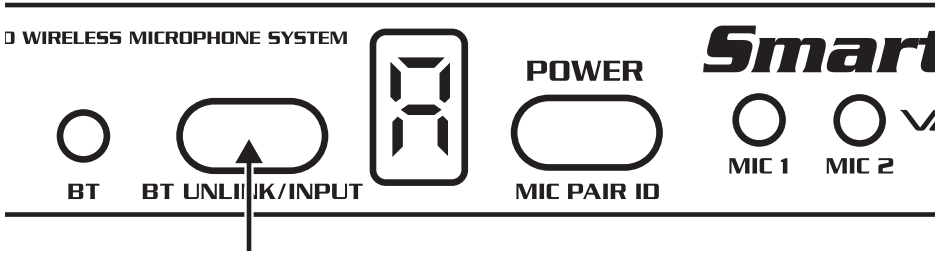

Using the 3.5mm to RCA cable, connect the single 3.5mm end into the AUDIO IN on the SmartOke and connect the dual RCA red and white ends into an AUDIO OUT on your player or device.

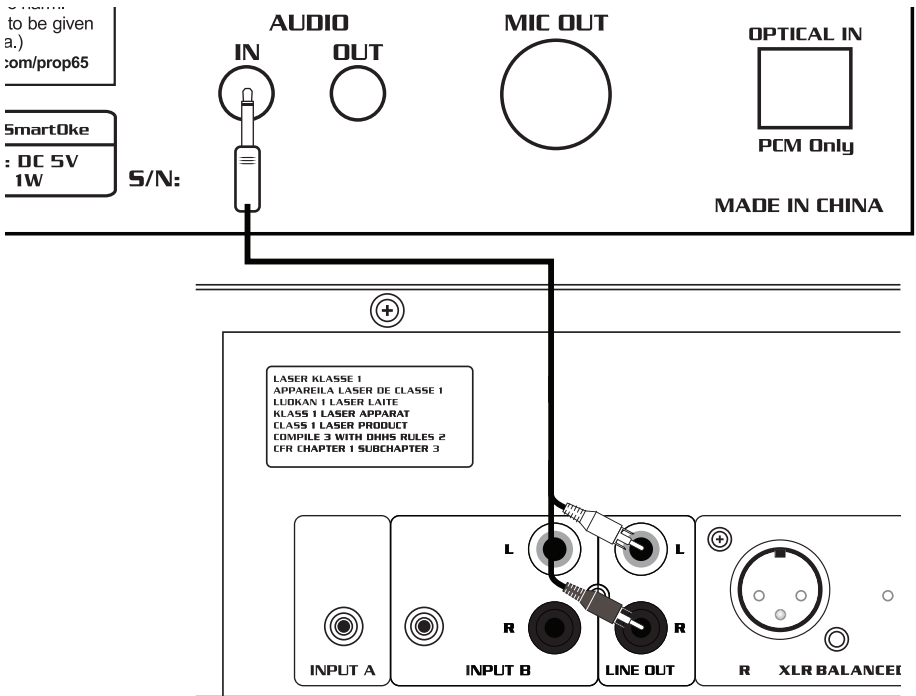

Our Team is Here to Help



Please do not return to the retailer if you are having a technical issue operating or connecting the unit. If you need additional help, have questions, or need support with your product contact us:

Toll Free: 800-678-5348

TEL: 909-593-8893

FAX: 909-593-8890

Email Tech Support at:
techsupport@vocopro.com



Visit us on Facebook,
Twitter, and Instagram